


Ultra short throw projector wall mount

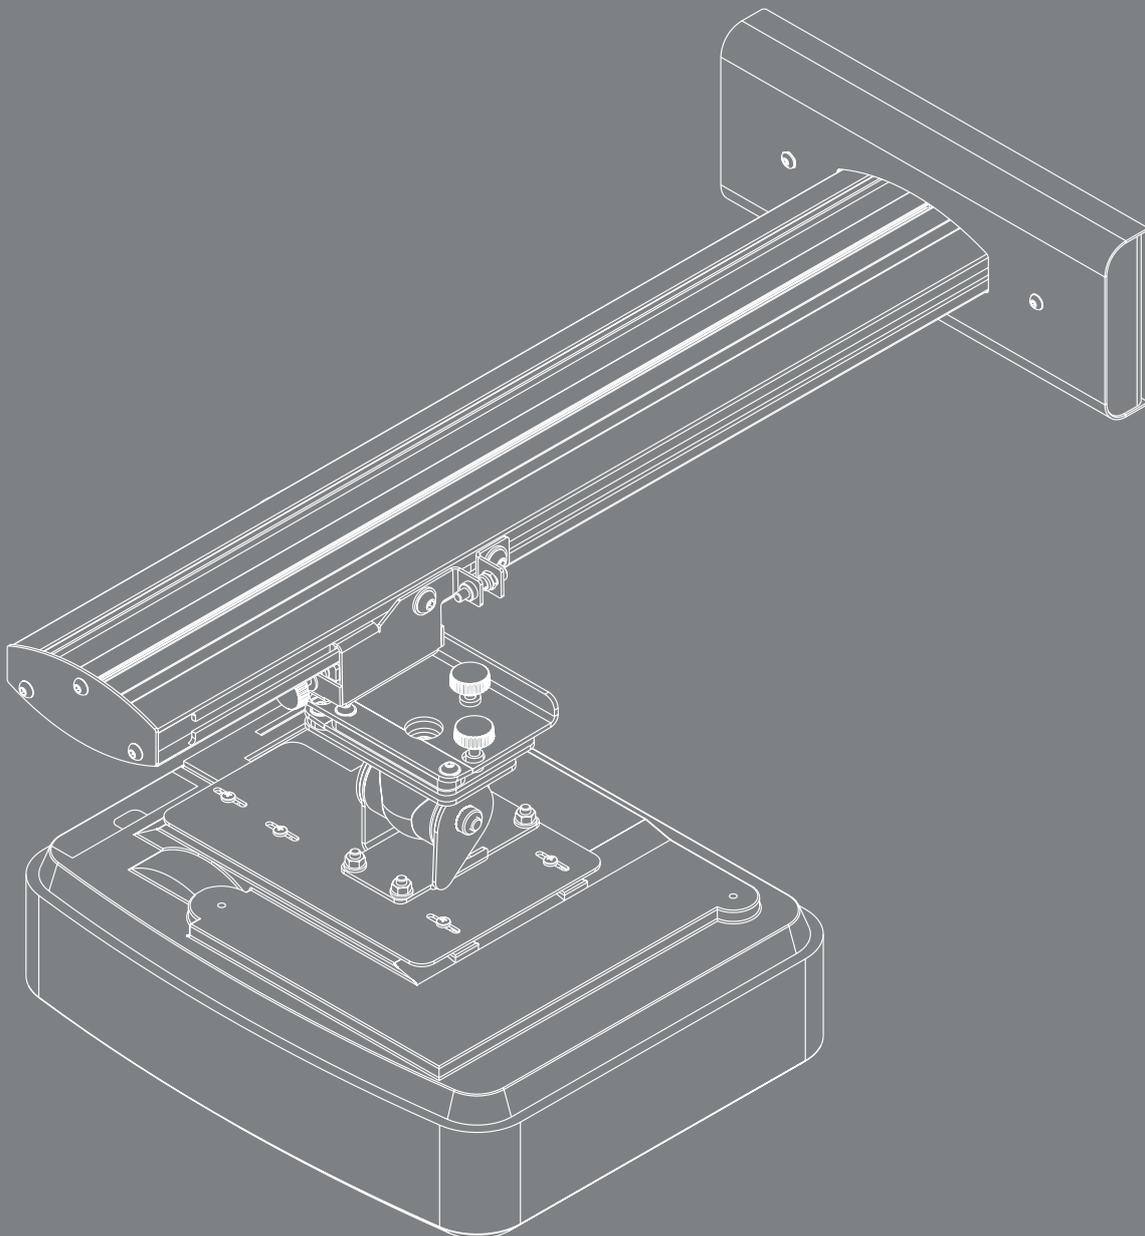

Safety


Read these instructions carefully before installing your equipment

- Install the mount in a suitable location using fixings, which are appropriate for the wall material and structure
- Consult a qualified builder if you are in any doubt as to the structural integrity of the wall
- Use all available fixing points
- DO NOT attempt to alter or modify any part of the wall mount or its attachments
- DO NOT use if any parts are broken or appear to be damaged
- Tighten all bolts and fixings securely
- Only use fixing provided with this bracket
- DO NOT mount your projector near to sources of heat or moisture
- Always have a minimum of two persons to install the projector and the mount

Package Overview

Fixing kit		
	A - M4 x 10mm	x5
	B - M8 x 75mm	x1
	C - M8 Tilt washer	x1
	D - M8 Locking washer	x1
	M5 Allen key	x1


Step 1: Attach the wall plate to the wall

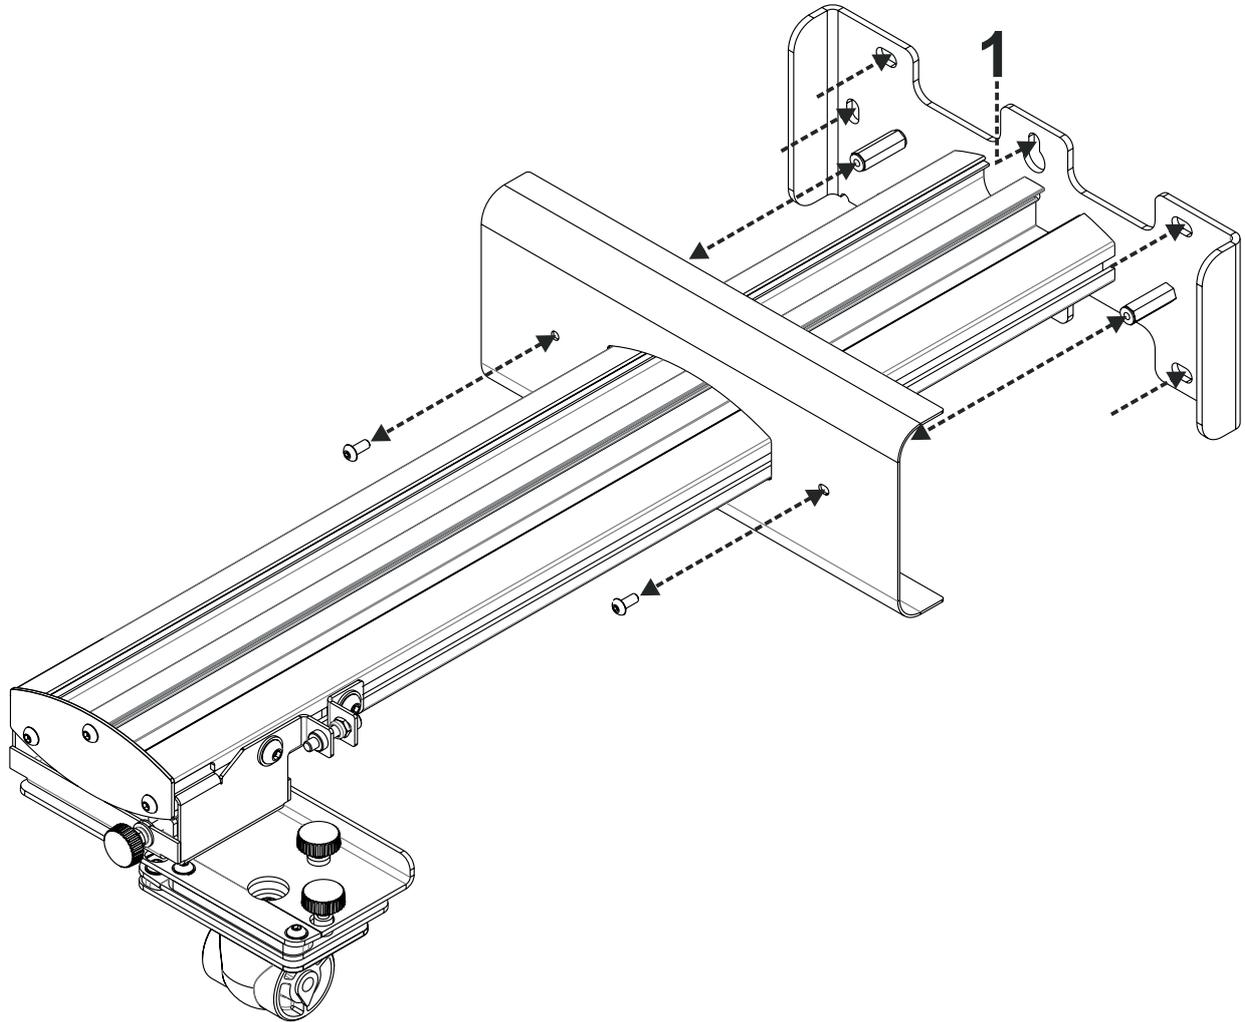

- For ease of installation mount the bracket on the wall using position **1** and mark other positions using a spirit level.
- Remove bracket and drill other positions
- Use fixings suitable for your type of wall construction
- Use all available fixing points
- If in any doubt of the suitability of the wall, it's construction or what type of fixings to use, consult a qualified builder or installer



Note: Remove wall plate cover before attaching to wall. Retain fixings for re-attaching cover later.

Step 2: Attach the projector to the mount plate

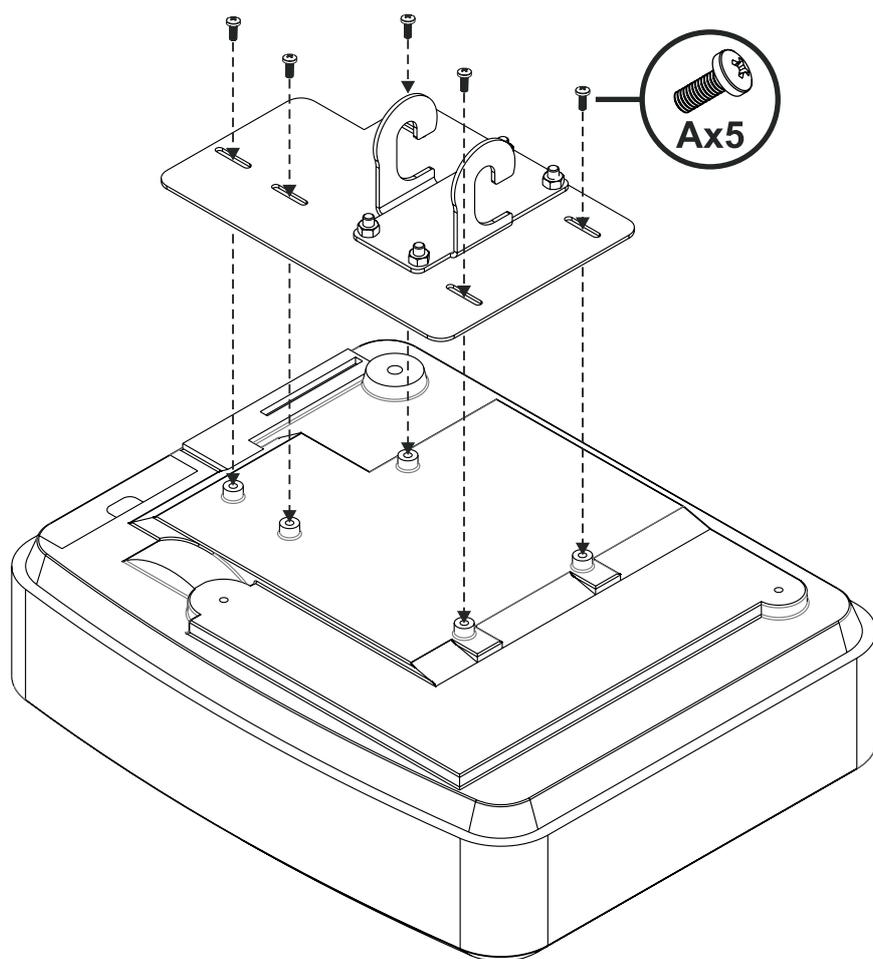


- Place the projector on a soft clean surface
- Position the pre-assembled mounting plate on top of the projector
- Insert **Ax5** (M4 x 10mm) screws from the fixing kit, tighten with a posidrive screwdriver

Step 3: Attach the projector to the mount

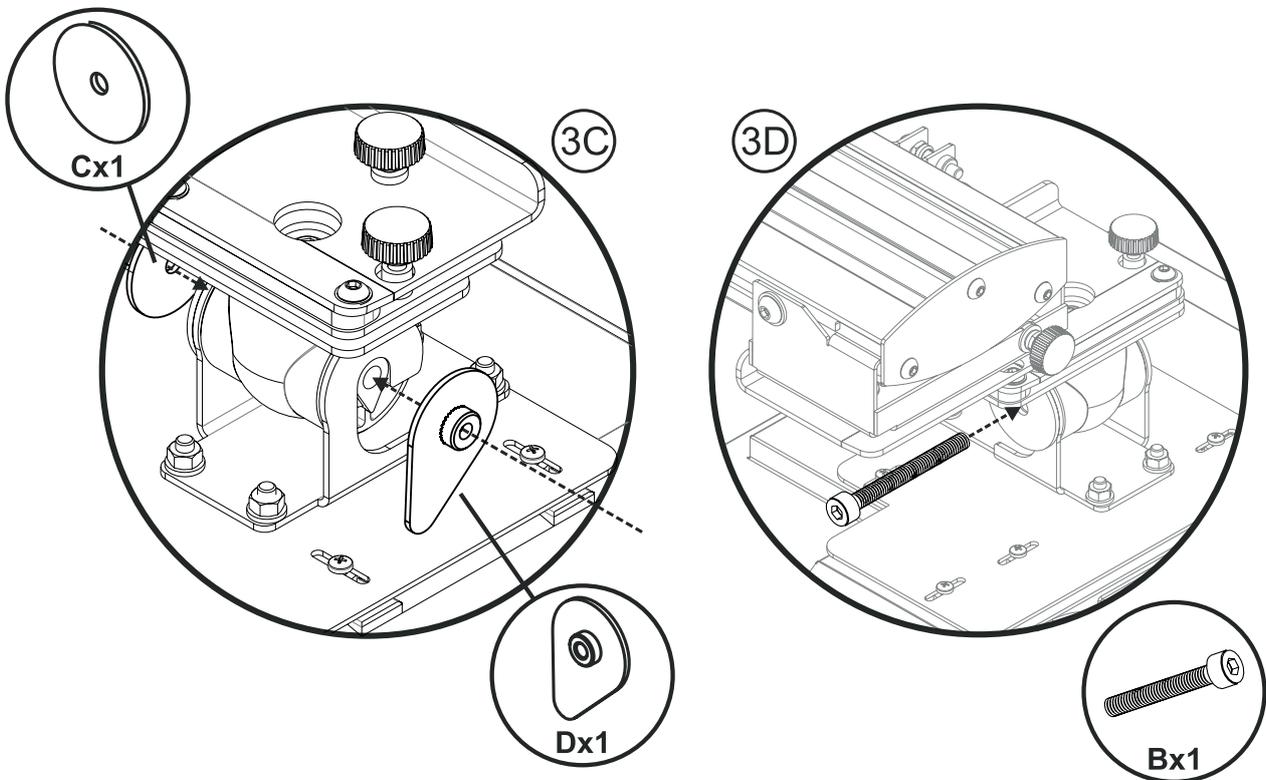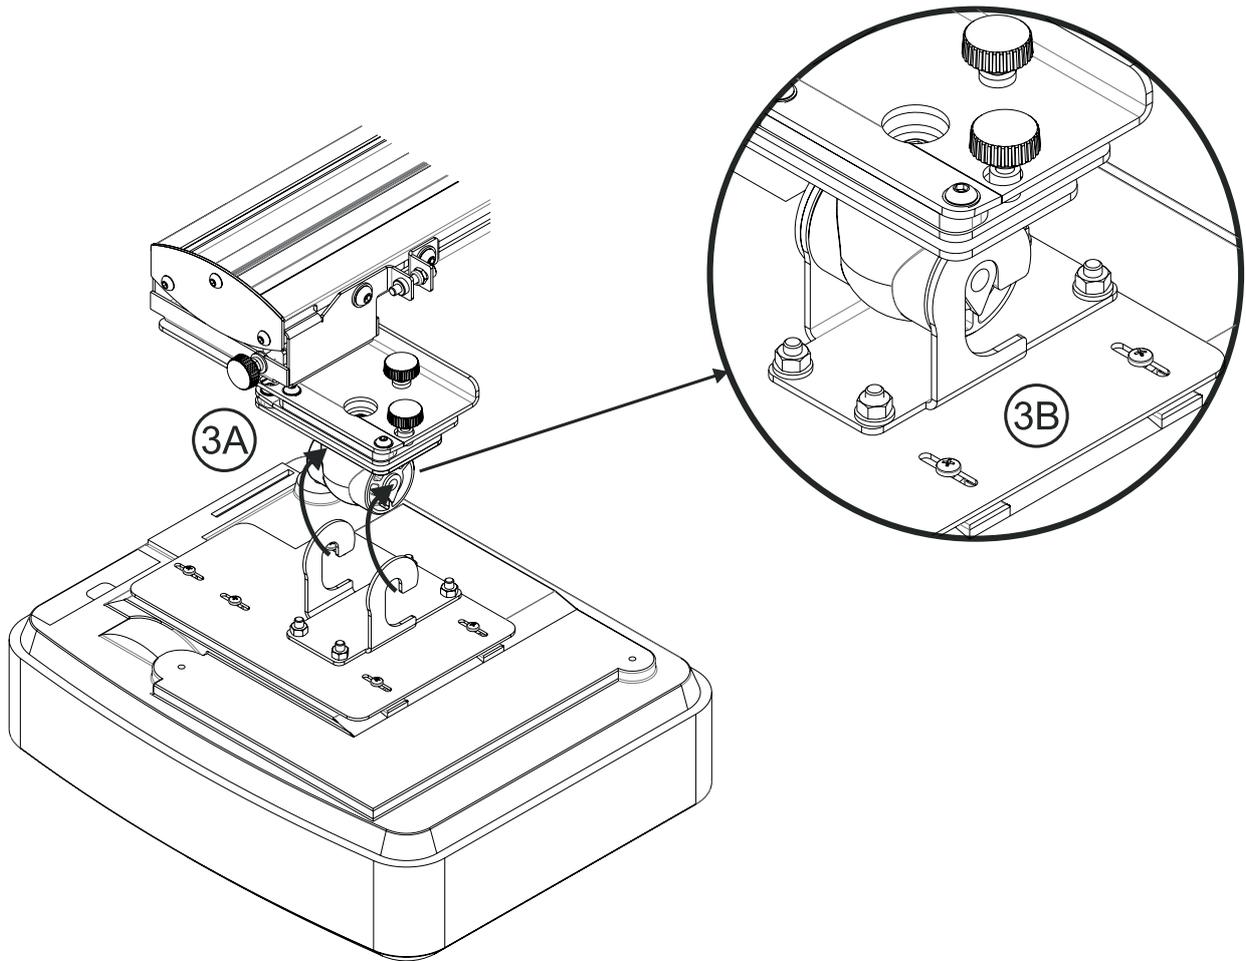


- Lift the projector and mounting plate in to position – **Fig 3A**
- Lift the projector so the two hooks slip over the protrusions on the black moulding – **Fig 3B**
- Position the washer **C** and teardrop shaped locking washer **D** against the hooks – **Fig 3C**
- Insert bolt **B** (M8 x 75mm) and tighten it using the one of the allen keys provided – **Fig 3D**

Step 4: Adjusting the projected image size

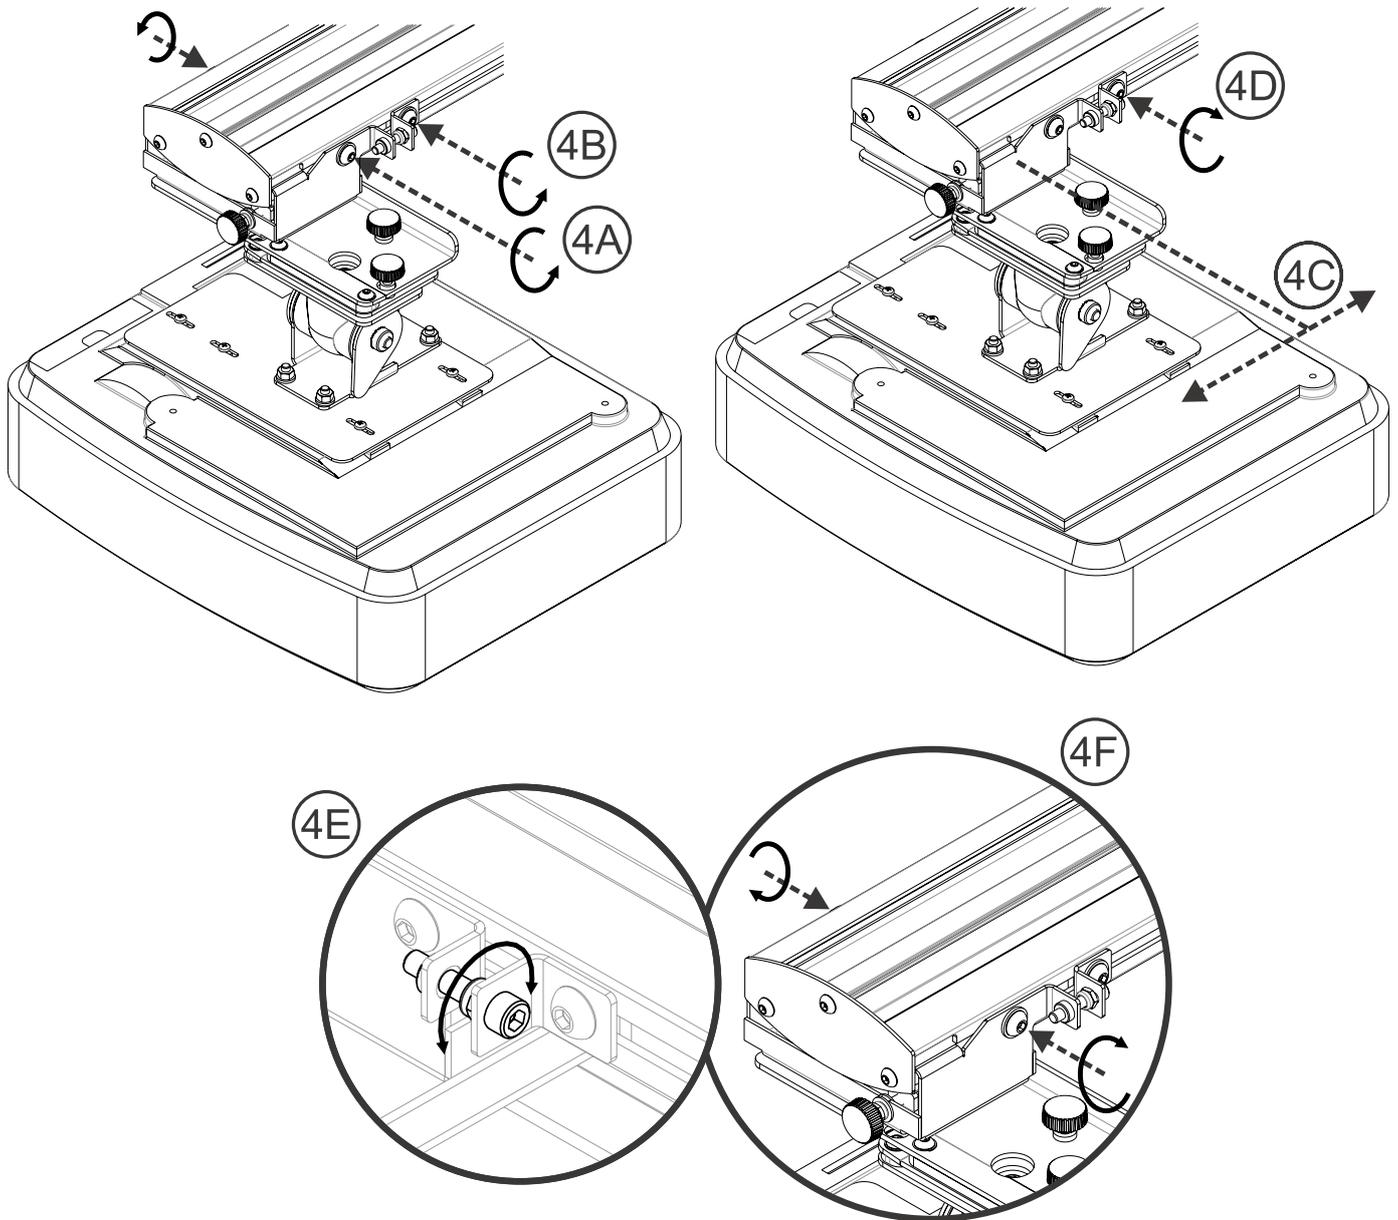



- Loosen the two bolts on the projector caddy – **Fig 4A**
- Loosen the bolt on the fine length adjuster – **Fig 4B**
- Slide the caddy and fine adjuster together until the screen size is nearly correct – **Fig 4C**
- Tighten the fixing bolt on the fine adjuster – **Fig 4D**
- Adjust highlighted bolt to fine adjust the throw distance – **Fig 4E**
- To reduce the projected image size, tighten the bolt clockwise using one of the allen keys provided to move the projector closer to the screen
- To increase the projected image size, loosen the bolt anticlockwise using one of the allen keys provided to move the projector away from the screen
- Once fine adjustment is done. Tighten the two caddy mounting bolts – **Fig 4F**

Step 5: Adjusting the tilt (vertical keystone)

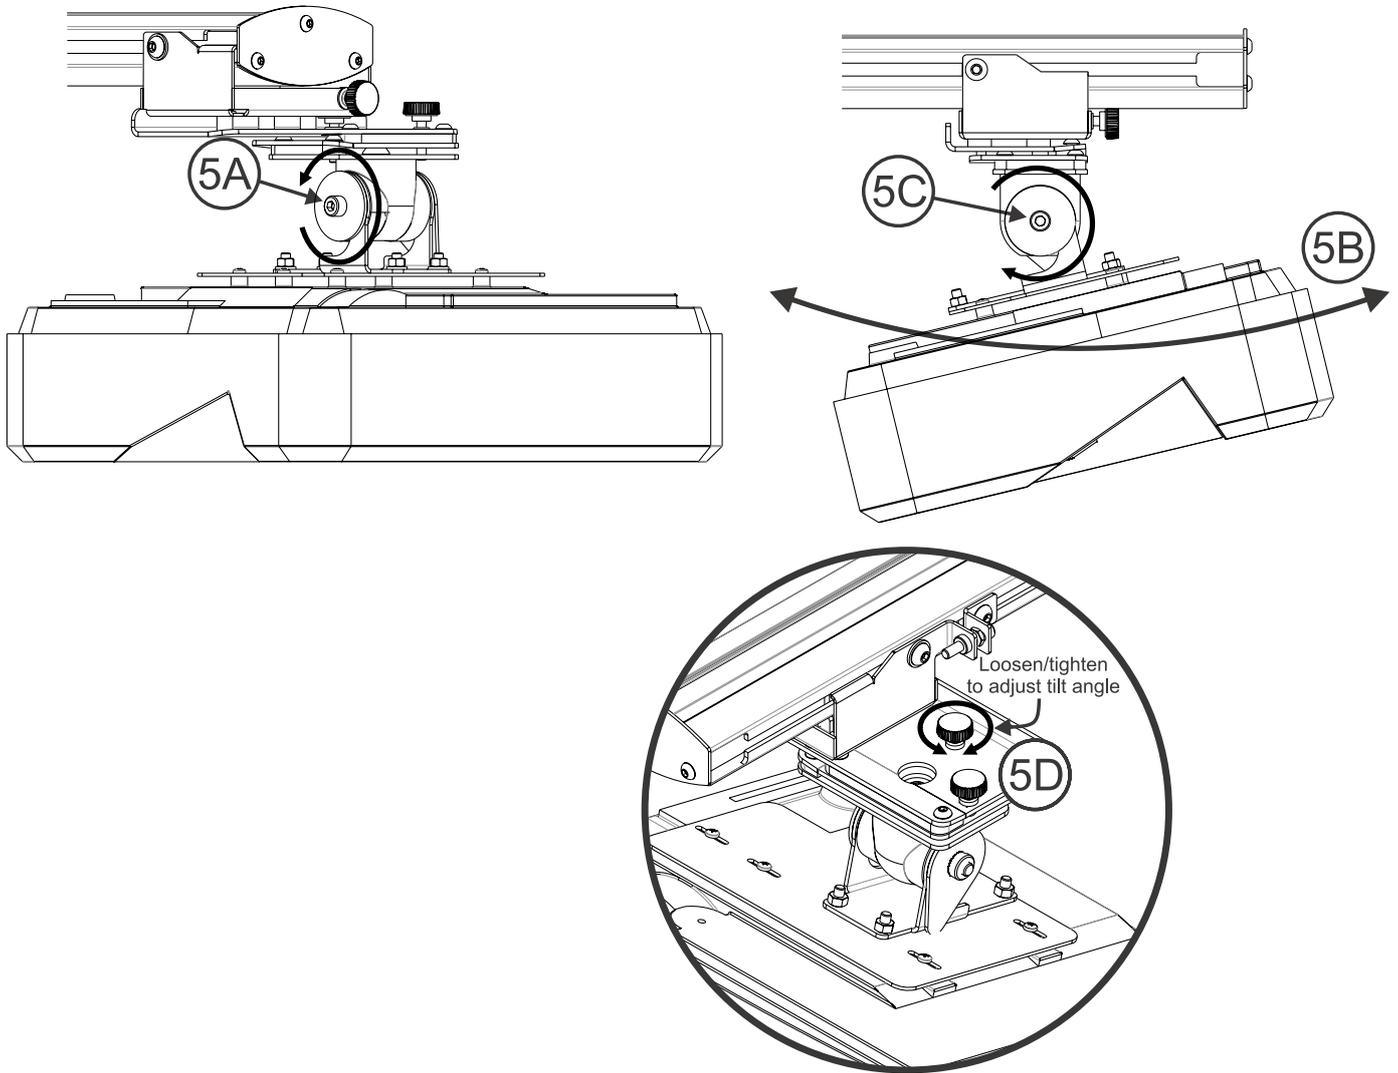



- Loosen the single M8 x 75mm bolt – **Fig 5A**
- Adjust the projector to the required angle – **Fig 5B**
- Tighten the bolt to lock the angle of the projector – **Fig 5C**
- Adjust the highlighted thumbwheel to fine adjust the tilt angle – **Fig 5D**
- To decrease the angle of projection, tighten the thumbwheel clockwise
- To increase the angle of projection, loosen the thumbwheel anticlockwise

Step 6: Adjusting the tilt (yaw)

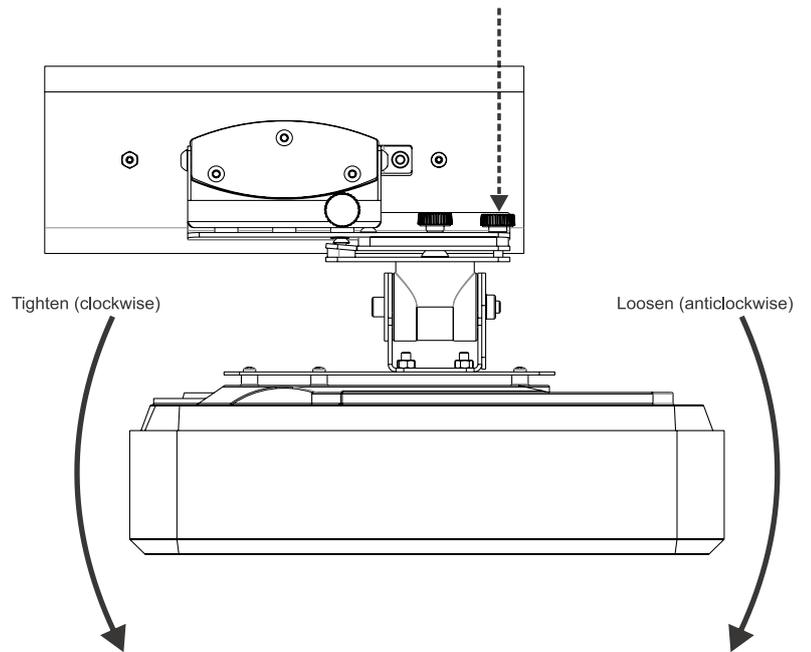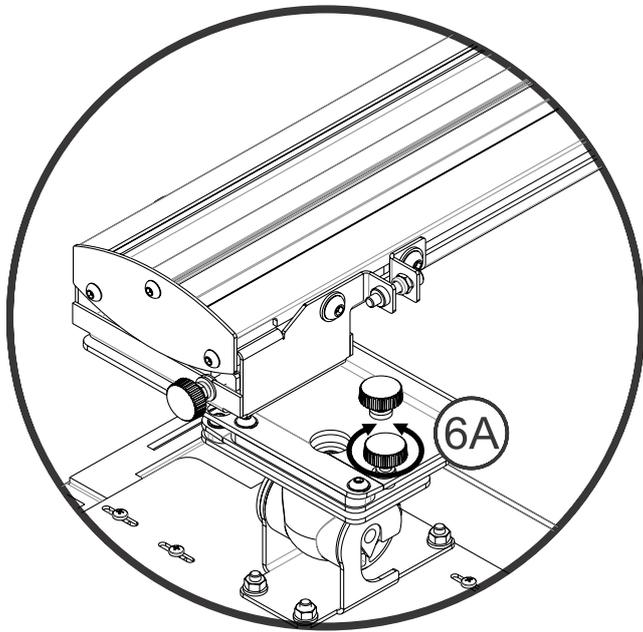

- Adjust the highlighted thumbwheel to fine adjust the yaw angle – **Fig 6E**
- To lower the left hand side of the projector, tighten the thumbwheel clockwise
- To lower the right hand side of the projector, loosen the thumbwheel anticlockwise

Step 7: Adjusting the tilt (horizontal keystone)

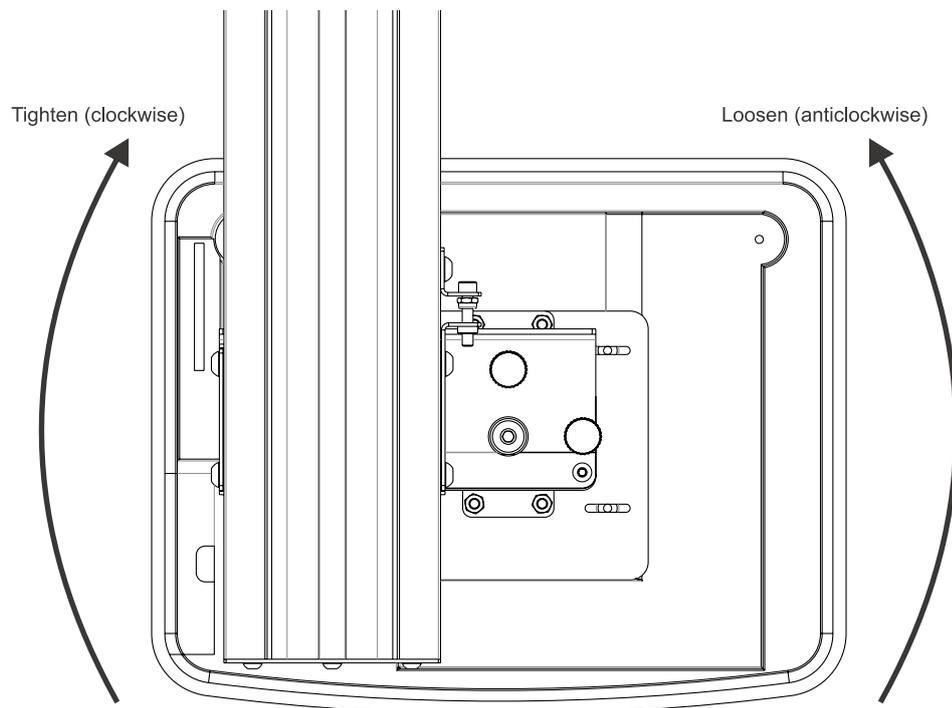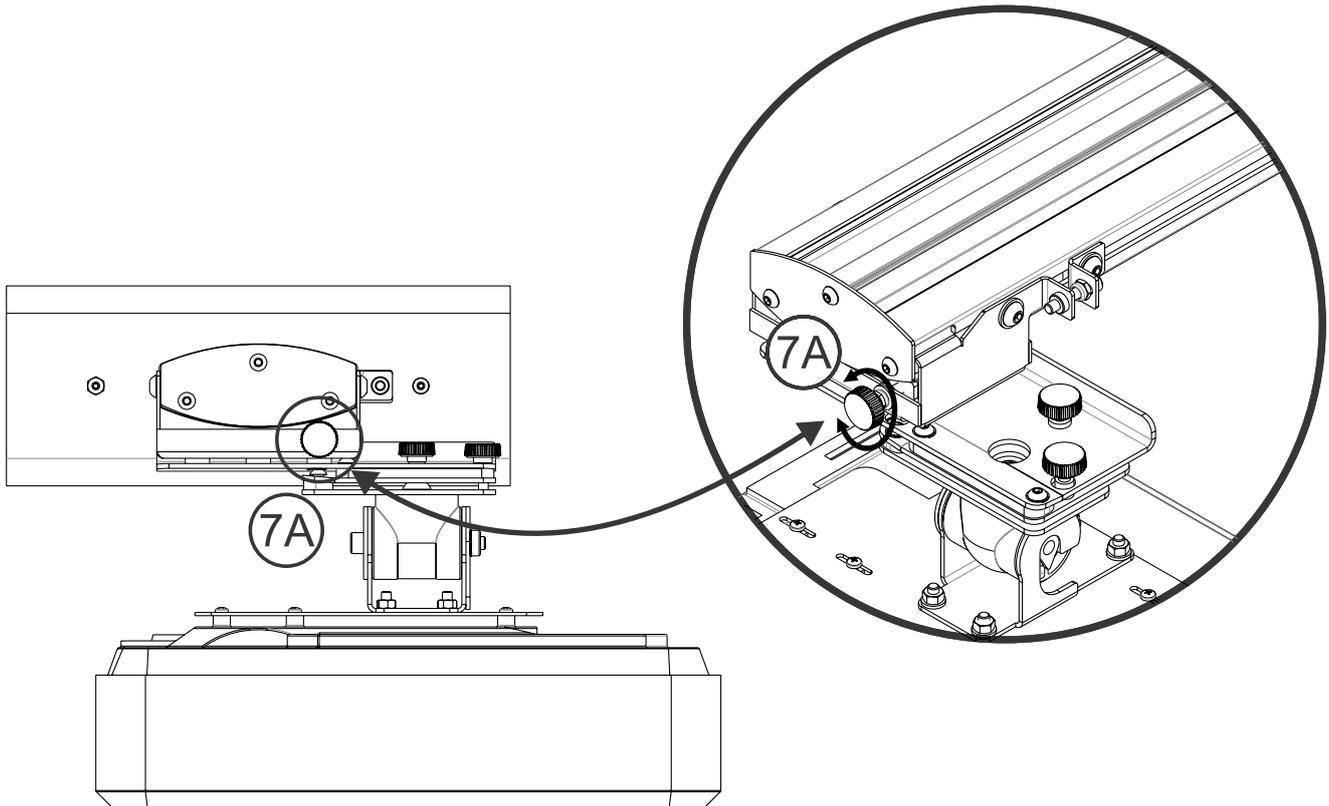

- The projector mount is pre-tensioned and can be rotated by hand
- Adjust the highlighted thumbwheel to fine adjust the rotation of the projector – **Fig 7A**
- To bring the left hand side of the projector closer to the screen, tighten the thumbwheel clockwise
- To bring the right hand side of the projector close to the screen, loosen the thumbwheel anticlockwise

