

Firmware Upgrade Procedure for the ThemeScene HD80 Home Cinema Projector



Step 1

Power off the projector and disconnect all the cables. Do not plug in the power cord until instructed.

Step 2

To download the firmware upgrade software, go to the HD80 product page. On the right-hand side of the page, under “Product Detail” there is a link called “Firmware” Right click on the link, and hit “Save Target As.....”

You will prompted to save a zip file (Note where the file is saved). Unzip the zip file that was saved to your computer.

Note: The zip file must be fully unzipped (extracted) before running the software.




Step 3

Connect the HD80 to the PC with the RS-232 cable. Do not plug in the power cord for the projector at this time. Select the correct COM port that the RS-232 cable is connected to.




Step 4

Open the HD80 firmware folder (if it is not already open). Double click on the executable file called “FlashUpgrader4Bin.exe.” This will run the HD80 firmware upgrade program.

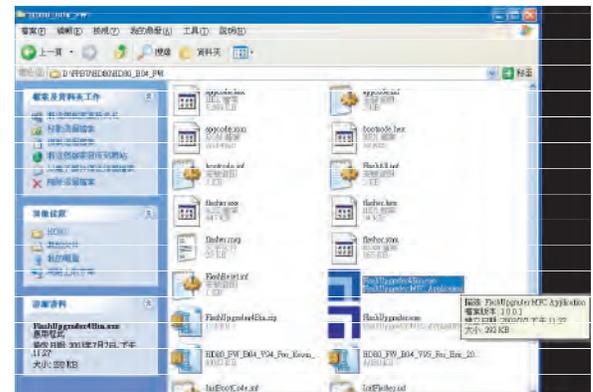


Step 5

Select “appcode.hex” and then click “Flash” to execute the firmware upgrade

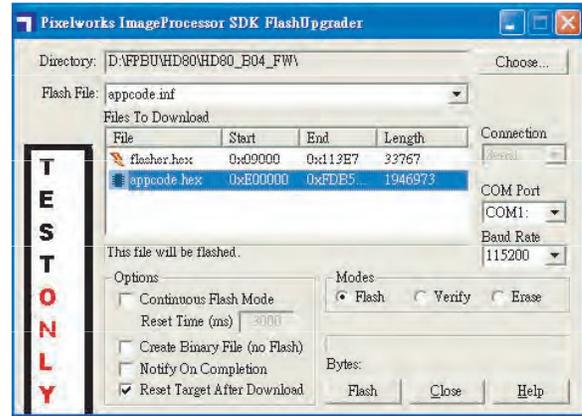


Step 6

When the words “Waiting for target reset” appear on the screen, plug in the power cord to the HD80.

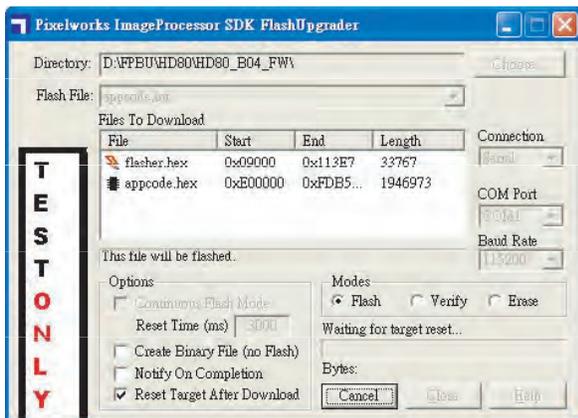


Step 7

While the firmware is upgrading, you will see the words “Downloading: Appcode. hex” on the screen.

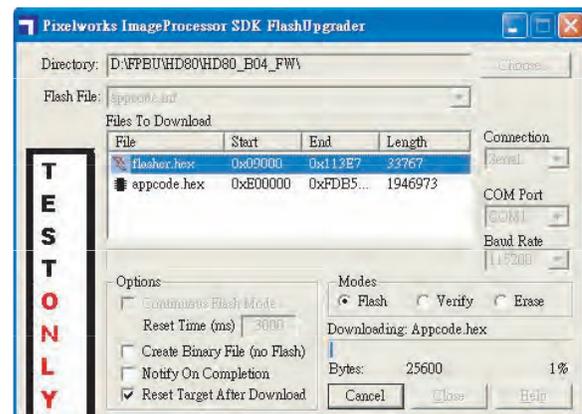

Step 8

When the firmware upgrade program has completed, you will see the following displayed on the screen

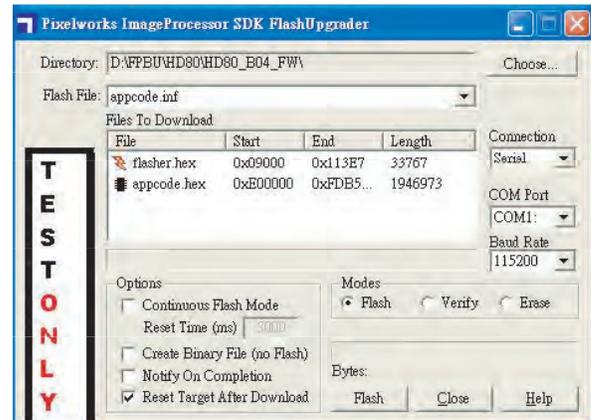**Step 9**

Disconnect the RS-232 cable and the power cord. The HD80 is now ready to be placed back in your home cinema environment.