




## Instruction Manual for Smart Controlled Screen

---

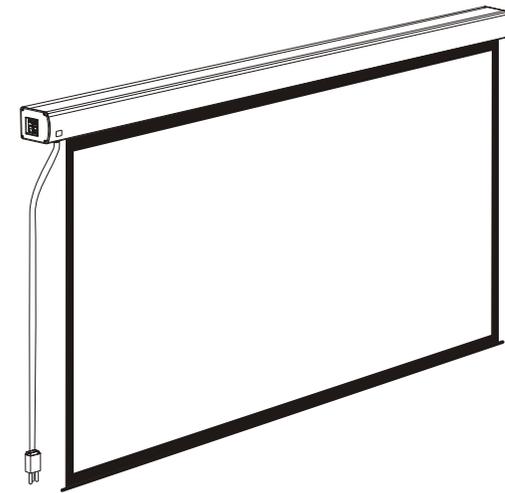

### Optoma Asia Corporation

5F., No108, Minchiuan Rd., XindianCity, Taipei 231  
Tel: 886-2-2218-2360  
Fax: 886-2-2218-2313  
www.optoma.com.tw

### Optoma USA

715 Sycamore Drive  
Milpitas, CA 95035USA  
Tel: 408-383-3700  
Fax: 408-383-3702  
www.optomausa.com

### Optoma Europe Ltd.


42 Caxton Way  
The Watford Business Park  
Watford Hertfordshire WD188QZ UK  
Tel: +44 (0) 1923 691 800  
Fax: +44 (0) 1923 691 888  
www.optoma.co.uk



Thank you for purchasing a Optoma projection screen.

Before use, please read instructions carefully. After installation, store instructions for future reference.

## Description

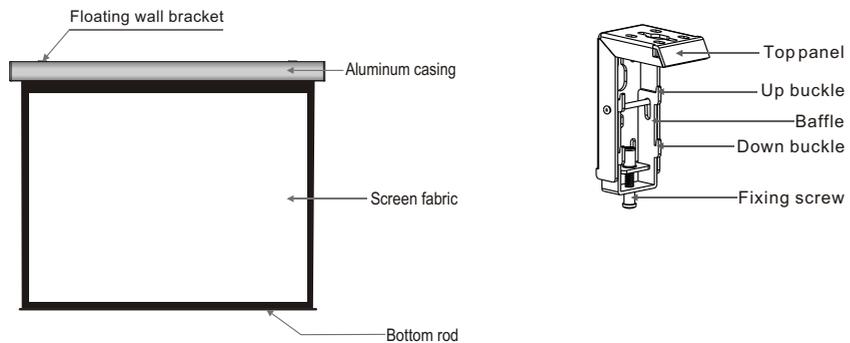

## Accessories

- Floating wall bracket (2pcs)
- $\phi 5 \times 40$ mm Tapping screw & cap (8sets)
- M5x10 Screw (6pcs)



- Ceiling hanger (2pcs)

 
- Trigger line ( 1pc )



- External IR Receiver (1pc)

- Allen key (1pc)

- Remote Controller (1pc)



- Instruction manual (1pc)

### Optoma Motorized Screen

Voltage (V)	Frequency (Hz)	Watts (W)	Application
230V/240V(EU)	50Hz/60Hz	90W/80W	Applies up to 120" motorized screens
120V/100V(US)	50Hz/60Hz	90W/80W	Applies up to 120" motorized screens

## Warnings

- The ceiling or wall used for fixture installation must be secure to prevent the screens from falling.
- While installing electrical motors, please hire professionals or your local dealer to ensure safety. A misconnection may lead to fire or leaks.
- Make sure the Fixing screw be fastened when using the wall bracket, to avoid any damage.
- Keep all infrared wireless products away from fluorescent lighting as it may cause malfunctions.
- Please read the following as any damage to the screen surface will affect the quality of the picture:
  1. Avoid contact or touching the screen surface as it may cause scratches or tears.
  2. Do not write or draw on the surface.
  3. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
- Roll up the screen after every use. Ensure that the screen is level when installing; do not pull on the sides or fold the screen.
- To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.

 Ignoring the safety warnings may lead to injuries and/or damaging the product.	 Fixtures should be installed in a secure place to avoid accidents or the screen falling.
 Do not connect any electrical attachments or remote controls.	 Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.
 Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.	 Refrain from hanging anything on the screen as it may cause the screen to fall.

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

## Installation

Take out all the parts from the packaging and follow the accessory guideline to ensure you have all parts.

There are three installation measures for this product, namely wall mounting, ceiling mounting and ceiling hang. The installed distance can be changeable up to your needs via adjusting the slipper block, while the ideal position is the mounting bracket is at its nearest point to the end cap, which can reduce unnecessary vibration or noise.

### Floating wall bracket installation

1. Choose screws for mounting according to wall material. ( Tips: Wood screws for wood wall, and Tapping screws for concrete wall.)
2. Mount the brackets onto the wall, assuring they are at the horizontal level. (Tips: draw an erasable level line when mounting the brackets) (Figure 1) Here below are the details:

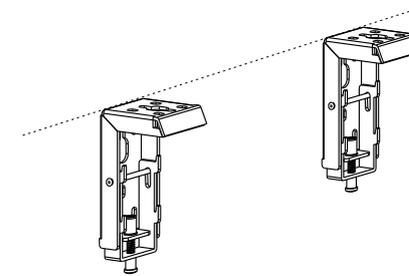


Figure 1

### Installation Steps

- a) Wood wall and ceiling installation: Drill in the  $\phi 5 \times 40$  screws through the appropriate holes in the bracket ( Figure 2-3 ).
- b) Drywall and ceiling and installation: Install the anchors and drill in the  $\phi 5 \times 40$  screws into the appropriate bracket holes. ( Figure 4-5).

Wood wall installation

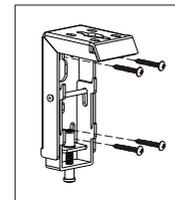


Figure 2

Wood ceiling installation

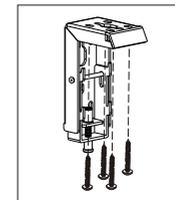


Figure 3

Concrete wall installation

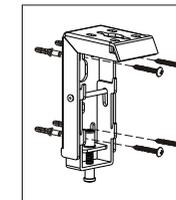


Figure 4

Concrete ceiling installation



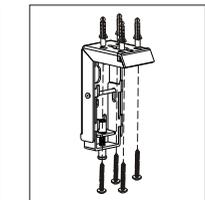


Figure 5


3. Loose the Fixing screw to lower down the Baffle all the way. ( Figure 6-7 )

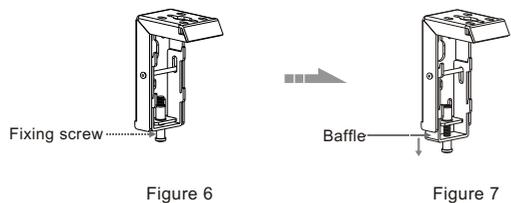


4. When mounting the screen onto Floating wall brackets, make sure the Up groove and the Down groove on the housing match with the Up buckle and the Down buckle on the bracket separately. ( Figure 8-9 ).

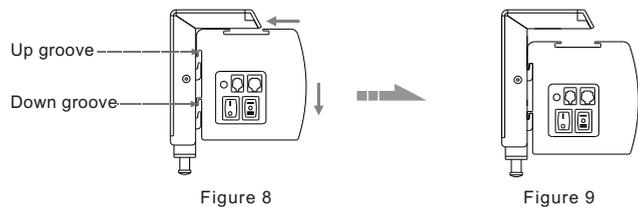

5. Fasten the Fixing screw on the bracket, to fix housing tightly onto the brackets. (Figure 10-11)

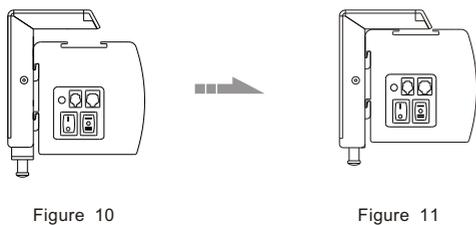

To avoid overheating the motor, do not continually retract and lower the screen for more than 3 minutes. If the motor overheats, it will need a cool down for at least 2 minutes. The motor does not need any lubricants. The drop and retract limit of the screen is factory preset to an optimal configuration. Please ask your local dealer or professional to adjust settings to avoid damaging the motor.

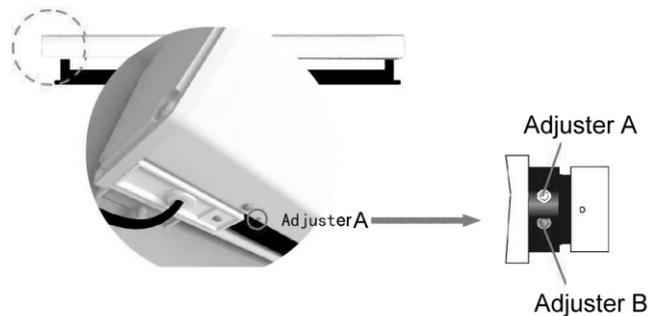

Adjust top black border up/down limit use Strew Adjuster A:  
 Turn clockwise to decrease top black border, turn anti clockwise to increase top black border.  
 Adjust bar height up/down limit use Strew Adjuster B:  
 Turn clockwise to increase bar height, turn anti clockwise to decrease bar height.

Remarks: Please use the provided Allen key to adjust the screen.  
 Please use the above with care, and only adjust in small increments i.e. one turn at one time.  
 Always check each adjustment once done to make sure you do not over adjust.  
 If you wish to adjust both top bar and top black border, only do one at a time and then check if correct.

### How to use Trigger Control:

1. Insert one end of the signal cable into the Trigger jack of the handle controller, and the other end into the DC5V-12V output hole of the projector (Figure 22-23).
2. Press the control switch of the handle controller to the "—" location.
3. Switch Manual/Remote Control Button to position "1" (manual stalls).
4. When running the projector, the screen will spread the fabric automatic by synchronous; when closing the projector, screen will be back automatic by synchronous too.
5. If you don't need to use the trigger control, please draw off the burst line directly, then control it by your hand.

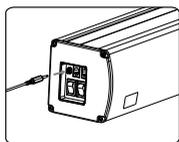


Figure 22

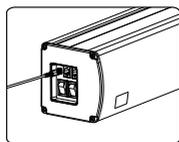


Figure 23

### How to use External Control (Central Controller or RS232/USB):

1. Turn the manual/IR remote control switch to position "0" (remote control stalls)
2. Plug one side of the signal cord into the computer output jack at left side of the screen's end cap, the other side of the signal cord to plug into the jack of Central Controller or computer RS232/USB (Note: in order to use RS232 Control, an Adapter is necessary to be connected with, the Adapter is not in the accessory package)(Figure 24-25), and then you can control up/pause/down of the screen via Central Controller or computer.

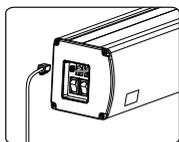


Figure 24

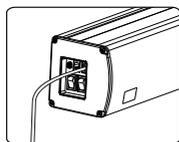


Figure 25

### How to use IR Remote Control:

1. Turn the manual/IR remote control switch to position "0" (remote control stalls)
2. Use the controller if the IR window is not blocked (Figure 26)
3. Use external IR Receiver if the IR window is hidden (by installation) or blocked (Figure 27)

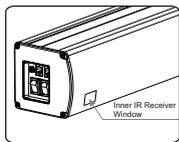


Figure 26

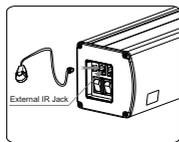


Figure 27

### Ceiling hang installation

To choose the tapping screws with hanger or other screws with hanger (unprovided) according to ceiling material. (Tips: Wood screws  $\phi 5 \times 40$  for wood ceiling and tapping screws for concrete wall.)

1. To drill two same holes with an electric drill horizontally with wall, then fasten hangers(unprovided) onto the ceiling. ( Figure 12 )

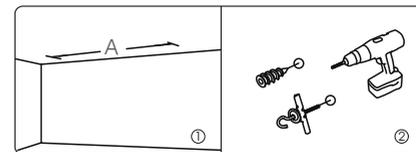


Figure 12

2. Use M5 x 10 screws in the accessory package to fix the ceiling hanger into wall bracket, make sure the tightening screws on wall bracket are fixed tightly. ( Figure 13-14)

 


Figure 13

 


Figure 14

3. After fix the ceiling hanger, make sure the up groove and the down groove on the housing match with Up button and Down button on the bracket separately and fasten the fixing screw on the bracket, to fix housing tightly onto the brackets.( Figure 15-16)



Figure 15

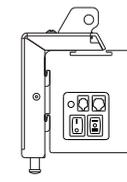


Figure 16

4. After finished step 2 and step 3, check whether wall bracket fix on the housing of screen tightly then you can hang the screen according to the figure 17.


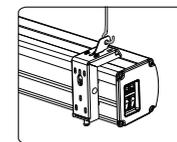


Figure 17

## Instructions

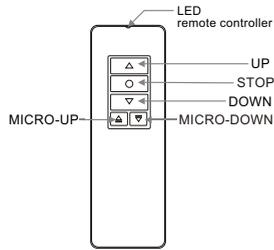


1GD-IRan

### Controller button instruction

- 1.To raise screen press "UP".
- 2.To hold screen at desired position press "STOP".
- 3.To lower screen press "DOWN".
4. To raise the screen little at your desired position press "MICRO-UP"
5. To lower the screen little at your desired position press "MICRO-DOWN"

### Caution:

- 1.The shortest distance between receiver and controller is 0.5 meter.
- 2.Controller will work within 30 degree away horizontally from the center of receiver point within 8 meters from the screen.
- 3.The controller will not work if the signal was covered by something.
- 4.Keep the controller far away from high temperature and humid situation.
- 5.Please change the battery when the signal is weak.
- 6.Please take the battery out if the controller was not being used for long time.
- 7.Please choose the same type battery as original supplied.

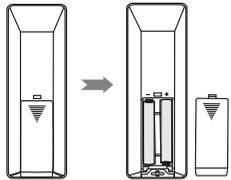

### How to install the battery:

- 1.Turn the controller around, push to open the cover as guide arrow.
- 2.Put the battery in according to the guide of cathode and anode.
- 3.Close the cover.

## Operation Instruction

### Connecting to the external power:

1. Tear off the glue cloth fixed on the bottom rod, ensure the bottom rod is not stuck by the casing.
2. Switch on the power (within stated voltage).

### How to use Manual/Remote Control Switch Button: (Figure 18)

The screen has four kinds of optional control methods: IR Remote Control, Manual Control, Trigger Control, External Control (Central Control or RS232/USB). When switching the Manual/Remote Control Switch Button to position "1", you can use Manual Control or Trigger to control up/pause/down of the screen. When switching to position "0", you can use IR Remote Control or External Control (Central Controller or Rs232/USB) to control up/pause/down of the screen.

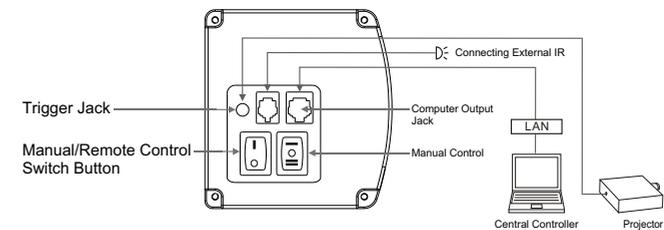


Figure 18

### How to use manual switch control:

1. Switch Manual/Remote Control Button to position "1" (manual stalls).
2. Turn the switch to position "=" to lower the screen; it will come down slowly. When it is all the way down, it will stop automatically (Figure 20).
3. Turn the switch to position "-" to retract the screen; it will go up into the metal casing. When it is all the way up, it will stop automatically (Figure 21).
4. To stop anytime while the screen is in motion, turn the switch to 0.

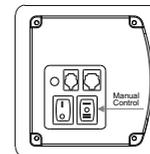


Figure 19

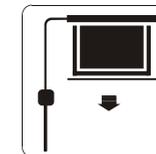


Figure 20

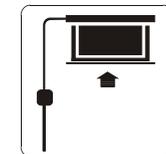


Figure 21